

# Assembly Instructions

## Building a unit(s) with a Cross Brace.

**SHELFSTORE®**


www.shelfstore.co.uk  
www.shelvingsystem.co.uk



### Tools Required

Philips Screwdriver

Read all instructions before starting

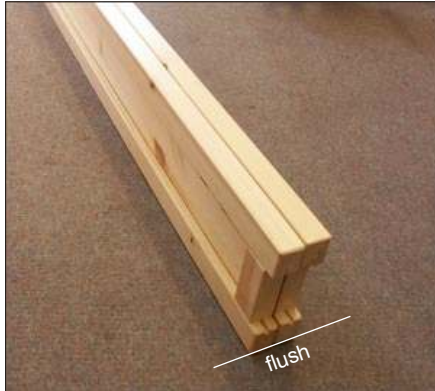

### Step 1

Lay two uprights on the floor as shown ensuring the tops and bottoms are at the same end.

The uprights must be flush.

#### Notes:

If using an **outer upright(s)** ensure it is facing the correct way before securing the cross brace.

If using an **infill(s)** slide it into the upright before starting to assemble.



### Step 2

Screw the Cross Brace into the **centre** of each upright. Minimum = 2cm from the bottom of the both uprights.

#### Notes:

The screws supplied are self-tapping and do not require a pilot hole to be drilled.



### Step 3

Open the uprights apart and insert two shelves as shown.

Use a third shelf as a *square* and then fix the final two ends of the cross brace into the **centres** of each upright.

### Step 4

You can now stand the unit up and add more shelves, or move them around as required. If building a run of units **only build the first one on the floor**.

Units over 183cm high and under 30cm deep must be secured to the wall using wall attachments.

#### Tips for a neater finish:

Do not use shelf supports for the top and bottom shelves.  
For tall uprights, position the top shelf upside down.